

ACCESS CONTROL

AC260 USER MANUAL



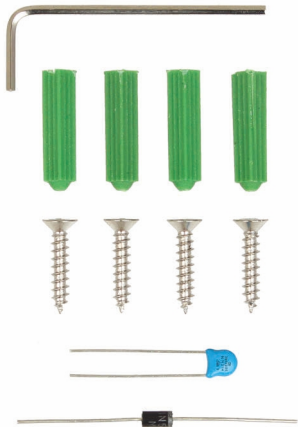
CE FC RoHS 

Model List

Step Number	Model	Spec.
1	AC260SADK	1 meter cable+2 relays
2	AC260SADKJ	Screw terminal+2 relays
3	AC260SADK-1	1 meter cable+1 relay
4	AC260SADKJ-1	Screw terminal+1 relay



Proximity and Keypad Reader



- 1 x Hex Key
- 4 x Plastic wall plug
- 4 x Countersunk screws
- 1 x Diode and 1 x Capacitor

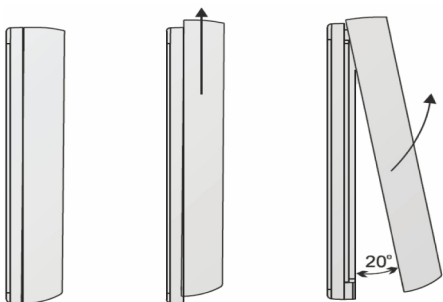
Contents

Installation	4
Wiring Example	5
Advanced Programming Guide	
How to set-up Access Pin Number	6
How to set-up Tags in batches	6-7
Deleting Access Pin or Tag	7
Changing Programming Pin	8
Clear all Pin and Tag Data	8
Default to Factory Settings	9
Lock 1 Output Operating Time	9
Enable Backlight fuction	10
Enable 'Buzzer' Function	10
Enable 'Tamper Alarm' facility	11
Access Pin Number for Lock 2 Output	11
Deleting Access Pin for Lock 2	12
Lock Output Operating Time for Lock 2 Output	12
System setup record	13-14
User Guide	15
Technical Specification	15

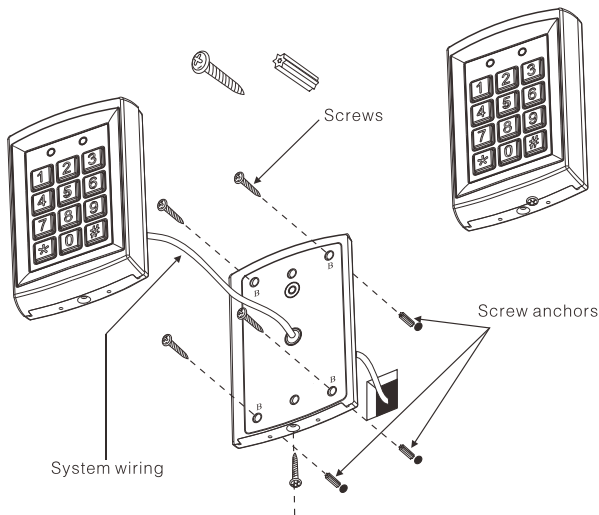
Installation



Release hex screw from the bottom of the keypad



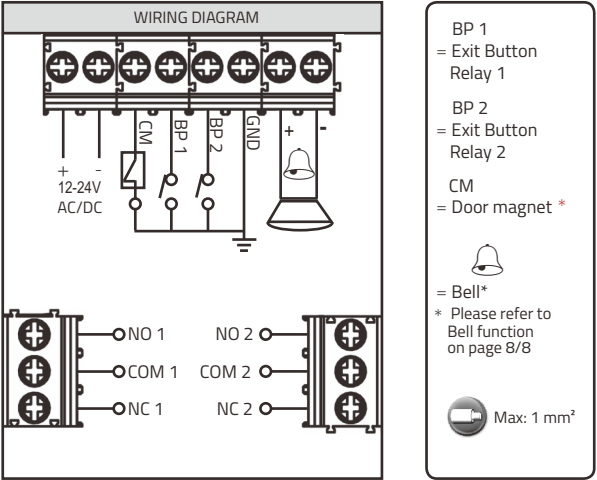
(Side View)
Push the keypad up to release from mount plate



Thread system cable through the cable entry hole then make the system connections (as per the wiring diagram), mount the bracket to the surface and slide the keypad to the mountplate, re-fit the hex screw to secure into position.

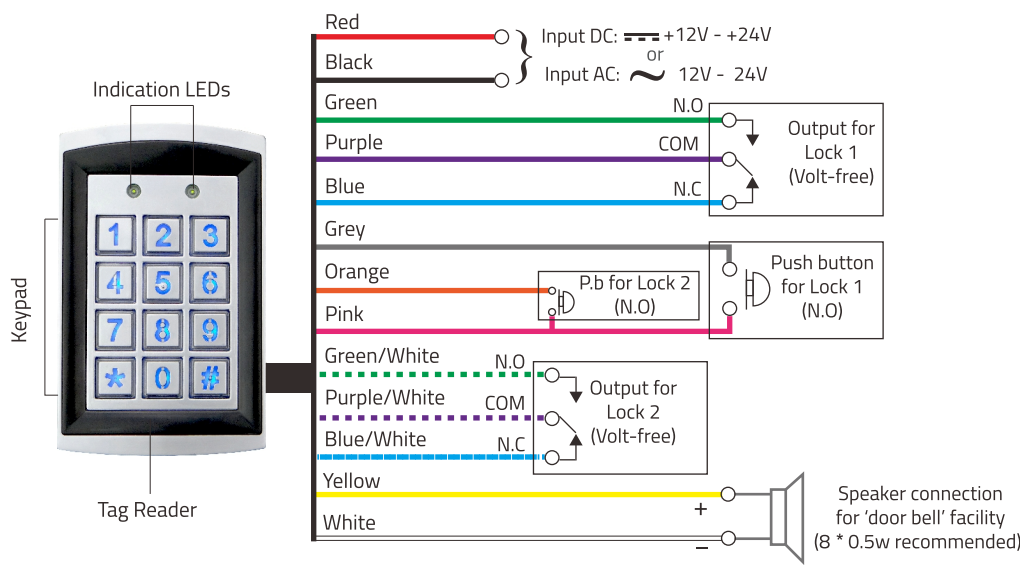
Note: if using more than one keypad, ensure that the keypads are mounted a minimum 185cm apart

Wiring 1

 


*Door magnet = Detection of door status. When someone opens the door and comes in, the door is closed. The system will automatically detect the door status and lock the door, even though there is still a delay period.

 
Wiring 2



How to set-up Access Pin Number

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 2	 Long Tone
4	Enter a starting location number 0 0 0 ~ 9 9 9	 Double Tone
5	? ? ? ? Enter a 4 digit pin (1234 not be used)	 Long Tone
6	# # To end programming	

How to set-up Tags in batches (Normal EM125KHz cards)

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 1	 Long Tone
4	Enter a starting unused location number * 0 0 0 ~ 9 9 9	 Long Tone
5	? ? ? Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present all the tags one by one	 Tone
7	All tags will be auto register # # To end programming	

*Each tag will use up a location number (the locations must)

How to set-up Tags in batches (Tags in consecutive numbers)

 
 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 5	 Long Tone
4	Enter a unused location number* 0 0 0 ~ 9 9 9	 Long Tone
5	? ? ? Enter 3-digit number as quantity of tags to be registered	 Tone
6	 Present the tag with the lowest serial number	 Tone
7	All other batch tags will auto register # # To end programming	

*Each tag will use up a location number

Deleting Access Pin or Tag

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	Enter the location number of tag/pin 0 0 0 ~ 9 9 9	
3	* * To delete	
4	# # To end programming	

Changing Programming Pin

 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 3	
3	? ? ? ? Enter new 4 digit programming pin	
4	? ? ? ? Re-enter new 4 digit programming pin	 Long Tone
5	# # To end programming	

Note; To access keypad's programming mode, the 4 digit programming code is entered in twice

 
Clear all Pin and Tag Data

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 8	
3	8 8	 Long Tone
4	# # To end programming	

Default to Factory Settings

Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*8	
3	99	 Long Tone
4	# # To end programming	

Lock 1 Output Operating Time

Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*1	
3	Enter number of seconds 00-99 ??	 Long Tone
4	# # To end programming	

Enable Backlight fuction

 
Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*2	
3	02 To enable 01 To disable	 Long Tone
4	# # To end programming	

Enable 'Buzzer' Function

Step Number	Action	Keypad Indication
1	Enter Programming 12341234 (Default)	 Long Tone
2	*2	
3	03 To enable 04 To disable	
4	# # To end programming	

 
*Once the "Buzzer" function is disabled, keypad operation becomes mute.

Enable 'Tamper Alarm' facility

 
 
Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 6	
3	0 2 To enable 0 1 To disable	 Long Tone
4	# # To end programming	

Tamper alarm activates the keypad's internal buzzer and door bell' output if the light sensor is exposed

 
Access Pin Number for Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 9	
3	0 3	 Long Tone
4	Enter an unused location number 0 0 ~ 0 9	 Double Tone
5	? ? ? ? Enter a 4 digit pin (1234 should not be used)	 Long Tone
6	# # To end programming	

Deleting Access Pin for Lock 2

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 4	
3	Enter the location number of pin 0 0 ~ 0 9	
4	* * To delete	
5	# # To end programming	

Lock Output Operating Time f or Lock 2 Output

Step Number	Action	Keypad Indication
1	Enter Programming 1 2 3 4 1 2 3 4 (Default)	 Long Tone
2	* 5	
3	Enter number of seconds 00-99 ? ?	 Long Tone
4	# # To end programming	

To assist in future programming, it is recommended that a record is made of the system setup.

[illegible]

record is made of the system setup.

[illegible]

User Guide

To release Lock 1

(A)
Enter a programmed
Access Pin number

(B)
Present a
registered tag

To access programming mode

1 2 3 4 1 2 3 4
(Default)



Technical Specification

DC input	12 - 24volts
AC input	12 - 24volts
Standby current	80ma
Operating current (without lock)	110ma

Working temperature	-20c to +50c
Reader frequency	125KHz
IP rating	65
Dimension	76 x 120 x 22mm